



NO.	COMPONENT NAME	NO.	COMPONENT NAME	NO.	COMPONENT NAME	NO.	COMPONENT NAME
RELAY1	CONDENSER FAN RELAY	RELAY5	EVAPORATOR FAN RELAY	FUSE2	CONDENSER FAN FUSE	FUSE6	DEFROST FUSE
RELAY2	ON ROAD COMPRESSOR RELAY	RELAY6	DEFROST RELAY	FUSE3	COMPRESSOR FUSE	FUSE7	MAIN FUSE
RELAY3	STANDBY COMPRESSOR AUTO RELAY	RELAY7	STANDBY RELAY	FUSE4	EVAPORATOR FAN FUSE	FUSE8	CAB COMMAND FUSE
RELAY4	CHANGE OVER RELAY	FUSE1	CAB COMMAND FUSE	FUSE5	MOTOR FUSE	COR	CONTACTOR COIL RELAY
						E-RT	SUCTION TEMP SENSOR